

QUICK START GUIDE

Caution

- 1 Verify the local voltage and receptacle type are correct for the scale.
- 2 Place the scale on a level stable surface.
- 3 Avoid sudden temperature changes, vibration, wind and water.
- 4 Avoid load the weight exceed the maximum capacity on the platform
- 5 Please refer to operating instructions specified in manual.
- 6 When clean the scale, please disconnect the power

Unpacking

Remove the scale from the carton, Inspect the scale for damage, Make sure all components are included

 
- | | | | |
|---------------|----------------------------|-----------------------|---------------------|
| 1.Label scale | 2.Power cord | 3.Stainless steel pan | 4.Quick start guide |
| 5.Manual | 6.Verification Certificate | 7.Pole assembly | |

Leveling

- 1 The scale is equipped with a level indicator located back side of platter
- 2 Use the adjustable leveling feet located on the bottom of the scale until the bubble appears in the center of the indicator.



Level bubble



Installation

- 1 Place the scale on the level surface.
- 2 Install the stainless steel pan on top of the platter support.



Power Connection

- 1 Connect the supplied power cable to the power connection socket of the scale.
- 2 Plug the power plug into a correctly grounded power outlet.



Power Cord Socket

Pole Display Installation



①



②



③



④



⑤

- 1 Take out pole display assembly
- 2 Connect male and female connectors well
- 3 Take the cable connectors into the pole
- 4 Insert pole with cable to the holder
- 5 Using the screw to fix the pole to the holder

Power On/Off

Power ON

Long press power-on button located below the scale until hearing the " beep " sound and the scale is on.

Power OFF

Method 1: Press off key at the main menu , press "Power Off" at the pop up screen to turn off.

Method 2: Long press power-on button to turn off.

Restart scale

Press off key at the main menu screen, press "Restart" at the pop up screen to restart the scale

Note: Avoid disconnecting the mains power supply directly when switch off the scale, otherwise the weighing data will be lost.



Power on button




Off key

Label Roll Installation



- 1 Open the printer cover
Turn lever to open position

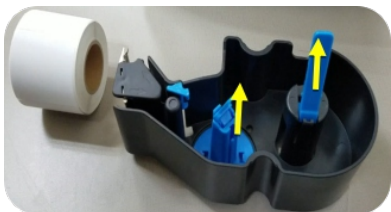

- 3 Release stopper levers
Remove back paper roll and label core



- 5 Insert the Cassette
Turn lever to close position



- 2 Remove the cassette




- 4 Insert Back paper under the slot of winding Bobbin and close the stopper levers



- 6 Close the printer cover

Interfaces

- 1 OTG USB2.0 Update system software
- 2 USB2.0 For mouse, keyboard, scanner
- 3 RJ45 Ethernet (Giga LAN)
- 4 RJ11 Cash drawer (12V)
- 5 RS232 For printer or other supported equipment
- 6 RS232 For printer or other supported equipment

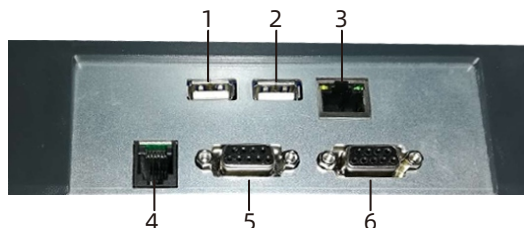

Indication

Label Mode

Measurement Information

Tare	kg/Weight	kg/Unit Price	\$/kg/Price	
0.000	0.000	0.00	0.00	
Weight, Price				
Category				
Preset PLU				


Product Information

Numeric keys

Function Keys

Main Menu

- Sale1 Operation View
- Database Product, Category, Format
- Data Transfer Data import and export
- Setting General Settings
- Sale2 Used for checkout application
- Print Format Receipt Format Management
- Report Check/Print Reports
- Technical Technical Settings
- Sale Used for custom UI
- Logout Logout from current account
- LAUNCHER Used for system setting and network communication, ect.

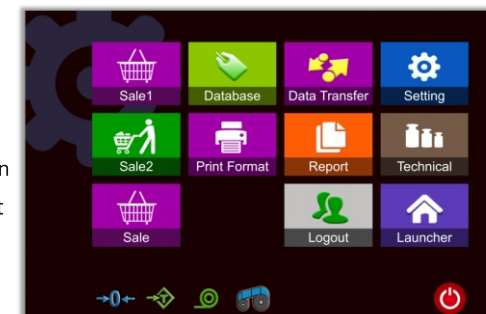

- 0← ZERO, Perform Zero
- ↔ TARE, Perform Tare
- FEED, Paper Feed /Calibrate Test
- Recycle, Recycle on/off
- OFF key, Power off or restart

For the full operation manual,
please scan the QR code below:



Website



IP30 Manual

T-Scale